

Casement Inswing

Series: B6500 Manufacturing Code: B6504

Drawing 1/2 Scale - For Custom Size Drawing Contact Graham

Note: Sealant Not Shown On Details. Refer To General Installation Instructions. For Other Blast Pressures And GSA Levels Contact Factory (3) (5)(1)Butt Hinge INSWING CASEMENT INSWING CASEMENT Dimension Interior Exterior 7/16" Lami Window (2)MultiPoint Locking Handle **ELEVATION** Optional (As Viewed From Interior) High Performance Mullion Note: Attachment Vertical Sections Below Not To Scale. Angle P/N 929308 Attached With #10 Min. (4)MultiPoint Locking Screws Handle 620220 (By Installer) Butt Butt 620241 Hinge (5)Hinge Standar Interior Interior 690300 Exterior Exterior 3 7/8" -3 3/8" 3 3/8" -3 7/8" -- Window Dimension Window Dimension


Note: Dashed Lines Represent Inswing Vented Units Solid Lines Represent
Outswing Vented Units; Lines Converge At Hinge Side Of Vent



Casement Inswing

Series: B6500 Manufacturing Code: B6505

Drawing 1/2 Scale - For Custom Size Drawing Contact Graham

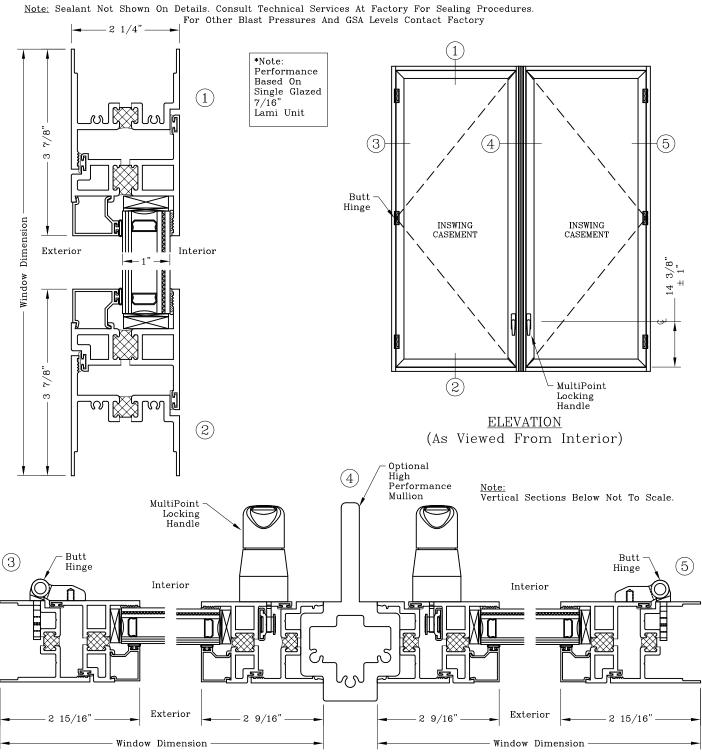

Note: Dashed Lines Represent Inswing Vented Units Solid Lines Represent Outswing Vented Units; Lines Converge At Hinge Side Of Vent




Fixed

Series: B6500 Manufacturing Code: B6506

Drawing 1/2 Scale - For Custom Size Drawing Contact Graham

Note: Sealant Not Shown On Details. Consult Technical Services At Factory For Sealing Procedures.

For Other Blast Pressures And GSA Levels Contact Factory

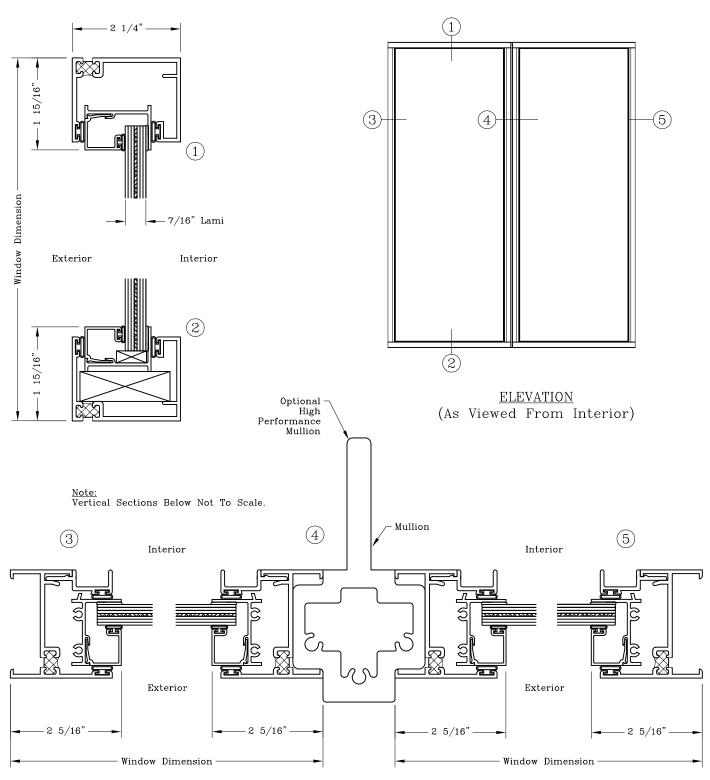



Fixed

Series: B6500 Manufacturing Code: B6507

Drawing 1/2 Scale - For Custom Size Drawing Contact Graham

Note: Sealant Not Shown On Details. Consult Technical Services At Factory For Sealing Procedures.

For Other Blast Pressures And GSA Levels Contact Factory

